

## How to Enable Test Mode on your VistaView

Please follow the steps below to learn how to enable Test Mode on your VistaView:

## Before you begin:

- Please make sure that you are connected to a wireless network.
- Test mode is intended for users to test experimental updates to the camera. Please contact Volk Optical if you would like to participate.
- Test mode will only be available for 30 days until it reverts to the current released version.

## Enabling Test Mode:

- 1. Power on the device and launch the VistaView app.
- 2. Tap on **Settings** in the upper right of the main menu.
- 3. Scroll down and select Test Mode.
- 4. Select Enter Test Mode Passcode (you may need to scroll down again)

CALIBRATE	~
BLUETOOTH	~
RESET VISTAVIEW SOFTWARE	~
TEST MODE	^
ENTER TEST MODE PASSCODE	
<ul> <li>▲ ()</li> <li>■</li> </ul>	

- 5. Enter the password provided to you by Volk Optical and press Confirm.
- 6. Press **Ok** and the device will begin downloading the Test Mode version.
  - a. Note if it does not start downloading, please check your internet connection and try again.
- 7. After it is done downloading, it will ask you to install the update. Select **Install**
- 8. After it is finished installing, select **Done** or **Open**.

You are now using Test Mode! If you need any additional assistance, please contact customer support at <a href="mailto:support@volk.com">support@volk.com</a>, or call us at 440-942-6161.